


# ATLAS CHINA

# GE U33/36

## #36 COUPLER CONVERSION

1. Remove Atlas retainer pin and existing couplers, do not file top of opening.
2. Assemble #36 Coupler with Coupler on top and Spring on bottom.
3. Insert coupler assembly into coupler opening and secure with Atlas retainer pin.
5. Check for correct coupler height, function, and clearance and make any adjustments necessary.

**#454 Swing Bracket** For close coupling and/or tight radius curves

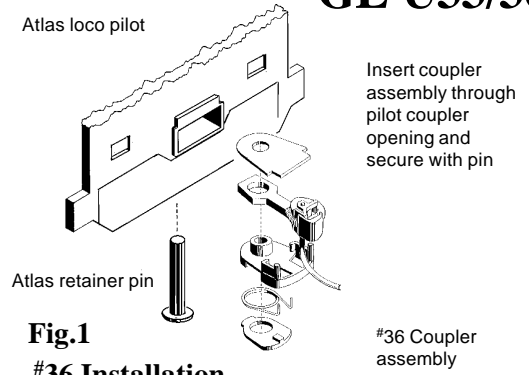

**Fig.1**  
**#36 Installation**