

ALCO (IMPORTED BRASS)

ALL ROLLING STOCK

No.5® BODY MOUNTED COUPLER CONVERSION

1. Assemble the No.5® Coupler per instructions and install by securing with screws furnished by manufacturer (usually metric).
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

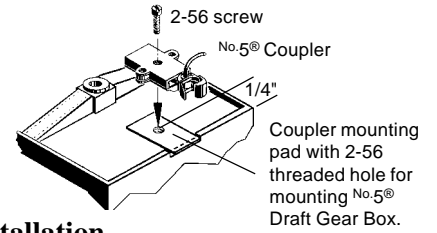


Fig.1
No.5® Installation