


# #230 ADAPTOR INSERTION PIC

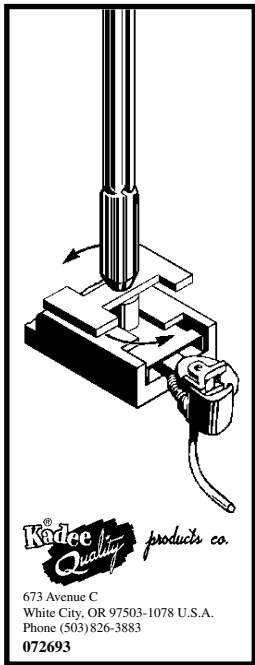

**Kadee**  
*Quality* products co.

673 Avenue C  
White City, OR 97503-1078 U.S.A.  
Phone (503) 826-3883  
072693

**INSTRUCTIONS:**  
Attach the #230 *Adaptor Insertion Pic* to one of the Talgo-truck adaptors found in the #20-Series coupler conversion kits. Use *Insertion Pic* to set adaptor crosswise into spring and coupler holes. Turn *Insertion Pic* and attached adaptor 90° as you press adaptor into position.  
(Complete directions are provided in the #20-Series coupler instruction sheets.)

---

**FOR USE WITH  
#20-SERIES  
TALGO-TRUCK  
ADAPTOR KITS**