

AHM (RIVAROSSİ)

OLD TIME 4 WHEEL PASS. TRUCK

#508 COUPLER CONVERSION BOLSTER WITH No.5® COUPLER

1. Remove trucks from car and coupler from truck.
2. Install #508 Coupler Conversion Bolster Kit, modified as shown in Fig.1. Kit includes No.5® Couplers and screws plus instructions.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

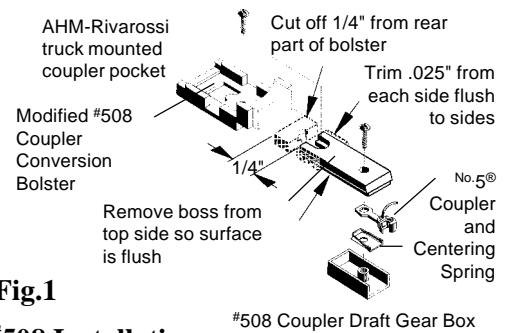


Fig.1

#508 Installation