

ATLAS

ALL ROLLING STOCK

No.5® COUPLER CONVERSION

1. Pull off coupler pocket lid and remove and discard couplers.
2. Place Centering Spring and Coupler over centerpost in coupler pocket.
Note: if coupler is loose in Atlas coupler pocket, coupler may disengage from spring and not function properly. For coupler pockets that are loose (too high) place a .010" thick (Kadee®#211) shim in pocket after spring and coupler have been installed.
3. Modify the #211 Shim by cutting off side mounting lugs and filing center hole larger to fit Atlas center post. Place in pocket between coupler and bottom pocket cover.
4. Secure with Atlas coupler pocket lid.
5. Check for correct coupler height, function, and clearance and make any adjustments necessary.

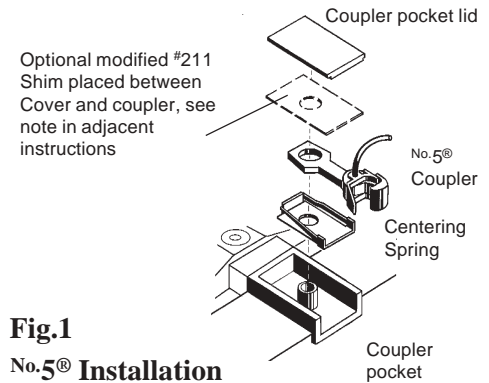


Fig.1
No.5® Installation