

KEY IMPORTED BRASS

No.5® COUPLER CONVERSION

1. Assemble the No.5® Coupler per instructions and install by securing with screw on centerline and 1/4" from car end.
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

ALL ROLLING STOCK

Shim or cut away as necessary to mount No.5® Coupler at correct height.

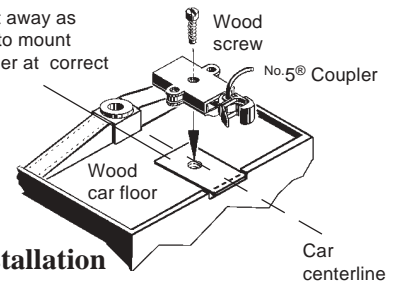


Fig.1

No.5® Installation