

LIFE-LIKE PROTO 2000

EMD SW-9/1200

No.5® COUPLER CONVERSION

1. Remove coupler screw, coupler box, coupler and box lid. Discard existing coupler.
2. Slip No.5® Centering Spring over coupler box centerpost and insert No.5® Coupler. Replace box lid and secure assembly to chassis with previously removed screw.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

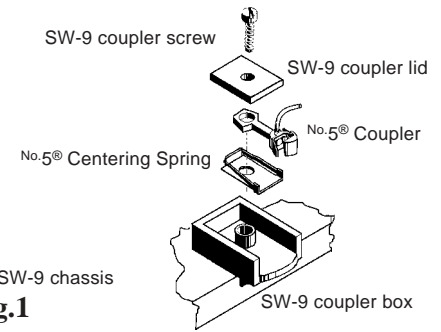


Fig.1
No.5® Installation