


# LIFE-LIKE PROTO 2000

# STEEL CABOOSE

## #38 COUPLER CONVERSION

1. Remove existing couplers on both ends and discard.
2. Assemble the #38 Coupler with the Torsion Spring on top and the Coupler on the bottom, as shown in Fig.1.
3. Secure coupler assembly with screw. Screw length might have to be shortened to avoid sticking out on the top of platform.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

032304

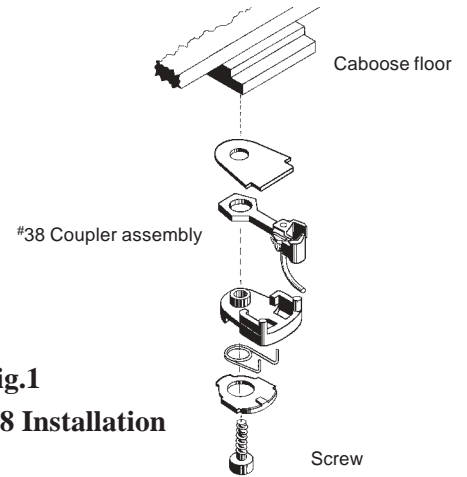

**Fig.1**  
**#38 Installation**