


## SUNSHINE MODELS

### No.5® COUPLER CONVERSION

1. Remove existing coupler and draft gear box if already assembled.
2. Assemble the No.5® Coupler with Centering Spring on top. Place No.5® Lid on No.5® Draft Gear Box and glue box and lid together. Use a plastic compatible cement applied sparingly along seams only.
3. Align the coupler assembly on the car centerline and secure to car coupler mounting platform with a plastic compatible cement. If you wish, you may secure coupler assembly with an optional screw.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

## ALL ROLLING STOCK

Secure No.5® Coupler assembly to car floor with glue or optional screw. Be sure coupler is aligned and on car centerline

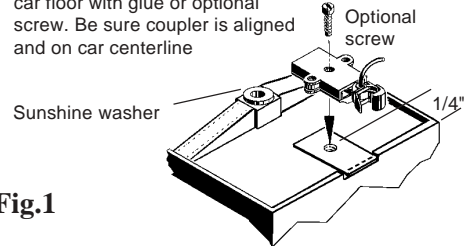

**Fig.1**

### No.5® Installation