

512

Bettendorf T-Section Metal Trucks

with Ready-to-Mount Whisker® Couplers
33" Ribbed Back Code 110 Metal Wheels


All Metal Non-Magnetic Trucks & RP-25
Wheels with Free Rolling Insulated Axles


Made In the U.S.A.

©2016 Kadee® Quality Products Co.

012616

Modification of common underframes for adaptation to Kadee® Trucks

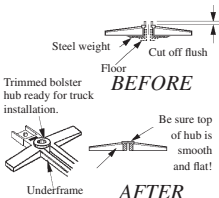

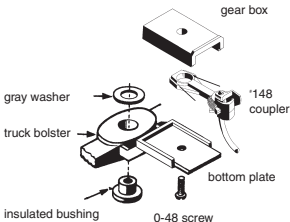

**#512 Bettendorf T-Section
 Metal Trucks with Ready-to-Mount
 Whisker® Couplers, #523 Code 110 (.110)
 33" Ribbed Back Metal Wheels
 & #637 HO Truck Springs**

Requires mounting on a flat surface with a #2 or 2-56 screw.

TRUCK MOUNTED COUPLER INSTRUCTIONS

Remove all flash and burrs from all parts. Burnish all work surfaces with #231 "Greas-em".

Assemble the #148 coupler as shown in diagram. Making sure the specialised snap together truck mount gearbox is on top and the lid is on the bottom. Tighten the 0-48 screw into the hole of the draft gear box. Add a puff of #231 "Greas-em" to inside of coupler and work back and forth. Insert the insulating bushing into the truck bolster from below, insert gray washer between truck and body bolster and attach with a #2 or 2-56 screw. Patent number 5,662,229



Made In the U.S.A.


WARNING:
 CHOKING HAZARD - Small Parts
 Not for children under 14 years.



Kadee® Quality Products Co.
 673 Avenue C White City, OR 97503