

AHM (RIVAROSSO)

4 WHEEL PASSENGER TRUCK

#508 COUPLER CONVERSION BOLSTER WITH No.5® COUPLER

1. Remove trucks from car and remove coupler from truck.
2. Install #508 Coupler Conversion Bolster Kit (includes No.5® Couplers) per Instructions. See Fig.1.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

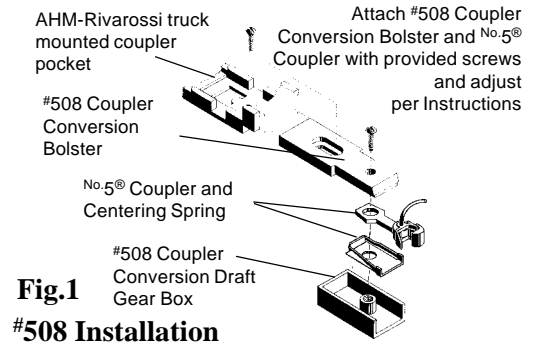


Fig.1
#508 Installation