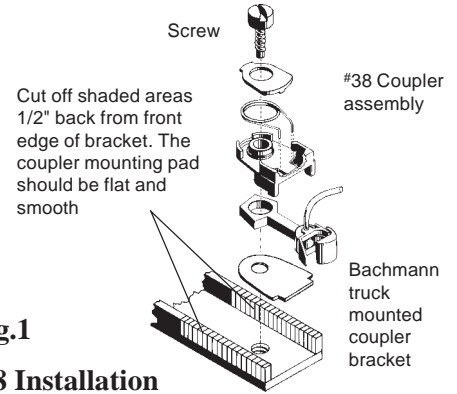


BACHMANN CHINA**BOX CAR 56' ALL DOOR****#38 BODY MOUNTED COUPLER CONVERSION**

1. Remove truck with coupler bracket from car body. Remove coupler and discard, saving coupler screw.
2. The only modification required is to cut away a 1/2" length of the side walls of the coupler bracket flush with the bracket surface. See Fig.1.
3. Assemble the #38 Coupler with Coupler on top and Torsion Spring on bottom. Hold assembly together temporarily with tweezers and place over hole. Align and secure coupler with Bachmann coupler screw.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

**Fig.1****#38 Installation**