

CENTRAL VALLEY

ALL FREIGHT CARS

#4 OR No.5® BODY MOUNTED COUPLER CONVERSION

1. Assemble the coupler per instructions and install by gluing in place or securing with a screw. Be sure the coupler is mounted exactly on centerline.
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

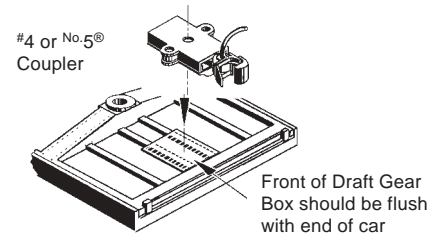


Fig.1

#4 or No.5® Installation