

MDC - ROUNDHOUSE

2 AND 3 TRUCK SHAY

#27 COUPLER CONVERSION

1. Couplers drop into the coupler box without any cosmetic changes other than cleaning out any flash from the die cast coupler box.
2. Place the coupler into the box with the Centering Spring on top of the coupler and the lid on the bottom.
3. Secure the coupler assembly to the box with the screw furnished with the kit.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

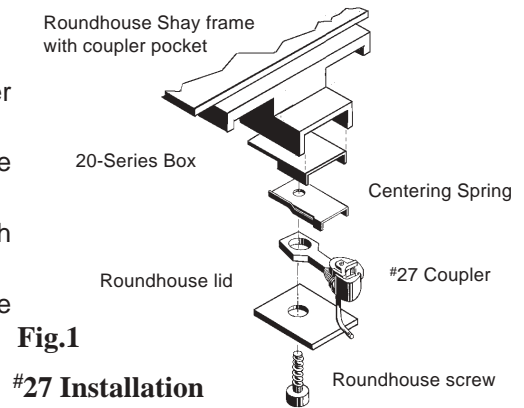


Fig.1

#27 Installation