



1561

Arch Bar Self-Centering Trucks

with 33" Ribbed Back
Code 88 Wheels


2 Piece "HGC" Trucks &
Metal RP-25 Wheels with Free
Rolling Insulated Axles

Made In the U.S.A.

©2014 Kadee® Quality Products Co.

020414

Modification of common underframes for adaptation to Kadee® Trucks

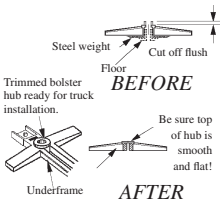

With #533 Code 88 (.088) 33" Ribbed Back Wheels

The centering bushing needs to rest securely on the same surface as the truck bolster. Any post that fits into the truck must be trimmed off flush with the surface of the bolster hub. Use the included 2-56 screws. Do not try to use press fitted pins or, in most cases, original self tapping screws. These will not hold the centering bushing as designed nor are they the correct size to fit the hole in the bushing. Mountings not covered will require you to use your own ingenuity.

To mount the trucks, after a level and secure mounting has been established, drop the centering bushing into the truck bolster making sure the triangle wedges are indexed properly. Slip the screw through the bushing and place the truck over the hole. As you tighten the screw, lift the truck and hold it parallel with the car. Tighten the screw snugly but not too tight. Hold the car upright and check the centering of the trucks. If they are not straight, loosen the screw and realign the truck, which turns the bushing slightly, until it hangs straight. If the bushing is easily turned after the screw is snug, place a thin washer between the bolster and mounting surface and tighten as above. Roughing up the mounting surface may also help.

Now the trucks will "self-center" when the car is picked up and can easily be placed on a straight piece of track without the usual handling and fumbling.

If needed only use a Dry Graphite Lubricant such as our "231 Greas-em".

Patent number 7,434,518 B2

Made In the U.S.A.



Kadee® Quality Products Co.
673 Avenue C White City, OR 97503