

1572

Self-Centering

Bettendorf T-Section “HGC” Trucks

with 33” Ribbed Back
Code 88 Metal Wheels


2 Piece “HGC” Trucks & RP-25 Metal
Wheels with Free Rolling Insulated Axles

Made In the U.S.A.

©2018 Kadee® Quality Products Co.

100918

Modification of common underframes for adaptation to Kadee® Trucks

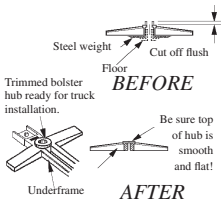

#1572 Bettendorf T-Section
"HGC" Trucks
with #533 Code 88 (.088)
33" Ribbed Back Metal Wheels

"HGC" High Gravity Compound weighs nearly the same as Metal Trucks but with more detail & a 2 piece split bolster design for more efficient truck equalization, reduced axle friction for greater rolling performance.

Requires mounting on a flat surface with supplied 2-56 screw.

To mount the trucks, after a level and secure mounting has been established, drop the centering bushing into the truck bolster making sure the triangle wedges are indexed properly. Slip the screw through the bushing and place the truck over the hole. As you tighten the screw, lift the truck and hold it parallel with the car. Tighten the screw snugly but not too tight. Hold the car upright and check the centering of the trucks. If they are not straight, loosen the screw and realign the truck, which turns the bushing slightly, until it hangs straight. If the bushing is easily turned after the screw is snug, place a thin washer between the bolster and mounting surface and tighten as above. Roughing up the mounting surface may also help.

Now the trucks will "self-center" when the car is picked up and can easily be placed on a straight piece of track without the usual handling and fumbling.

If needed only use a Dry Graphite Lubricant such as our '231 "Greas-em".



Made In the U.S.A.

Patent number 7,434,518 B2

WARNING:

Cancer and Reproductive Harm -
www.p65warnings.ca.gov

WARNING:

CHOKING HAZARD - Small Parts
Not for children under 14 years.



Kadee® Quality Products Co.
673 Avenue C White City, OR 97503