


#230 ADAPTOR INSERTION PIC

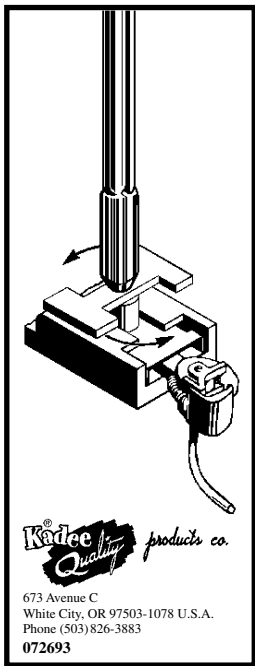

Kadee
Quality products co.

673 Avenue C
White City, OR 97503-1078 U.S.A.
Phone (503) 826-3883
072693

INSTRUCTIONS:
Attach the #230 *Adaptor Insertion Pic* to one of the Talgo-truck adaptors found in the #20-Series coupler conversion kits. Use *Insertion Pic* to set adaptor crosswise into spring and coupler holes. Turn *Insertion Pic* and attached adaptor 90° as you press adaptor into position.
(Complete directions are provided in the #20-Series coupler instruction sheets.)

**FOR USE WITH
212 20-SERIES
TALGO-TRUCK
ADAPTOR KITS**

Remove #230 Talgo Insertion Pic Cap before use.