



442

2 Pair

BRAKE PADS

For use on Kadee® 70 & 100 Ton Trucks.
Use on #513, #518, #555, #558, #560, #566,
#569, #570, #1560, #1566, #1569 & #1570

Made In the U.S.A.

#442



Brake Pads

When installing the brake pad you may have to cut or file the cast on brake beams off of the truck bolster.

File all burrs prior to installing brake pads.

The clip end needs to be expanded before you install the pad See Fig 1. The pads will line up with the tread of the wheels.

Check clearance between brake pad and wheel and make any necessary changes.

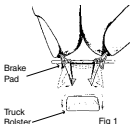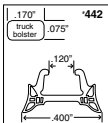

Made In the U.S.A.



WARNING:

**CHOKING HAZARD - Small Parts
Not for children under 14 years.**



Kadee® Quality Products Co.

673 Avenue C White City, OR 97503