



NEM 360

NEM 360

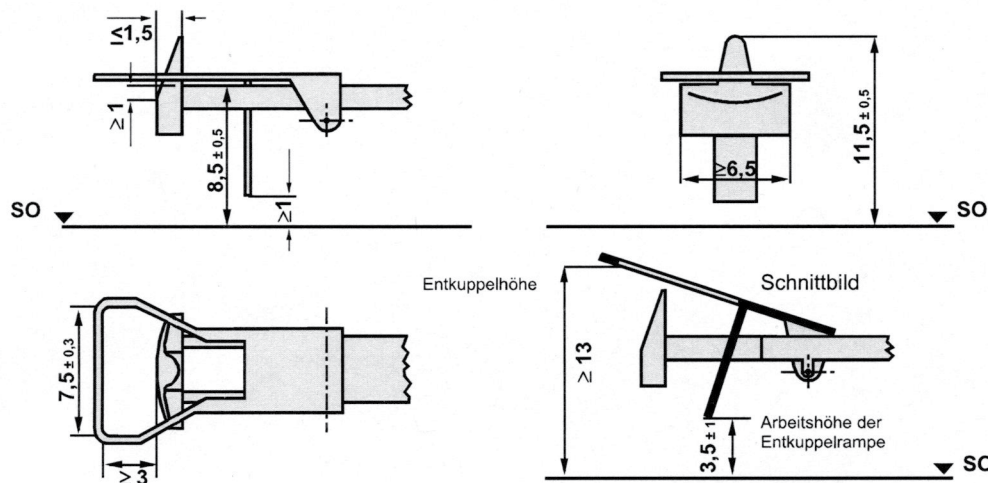

NEM-360 COUPLER CONVERSION USING KADEE 20 SERIES COUPLERS.

1. Remove the truck from the underbody.
2. Remove the existing lift coupler trim off upper tab.
3. Mount any 20 Series coupler on the arm attaching it with a screw and shimming coupler as necessary.
4. Use Kadee's® #231 Greas-em graphite lubricant and work coupler back and forth to coat surfaces.
5. Check for correct coupler height, function, and clearance and make any adjustments necessary.

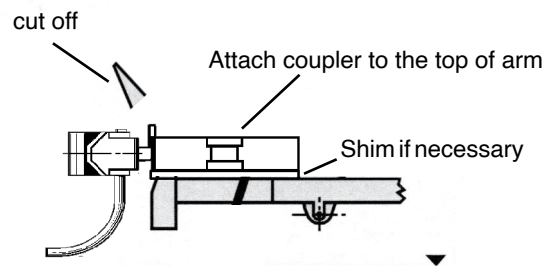

Shim or use offset coupler to achieve the correct coupler mounting height.

NEM 363 ADJUSTABLE HEIGHT COUPLER OPTION


You can use the NEM-363 adjustable height coupler with our Kadee® Bolt on NEM 363 Adapter to mount the coupler at the correct height. Use the #205 or #206 Coupler Height Gauge to set the correct height.

Remove the NEM-360 arm so it will not interfere with the mounting of the Kadee bolt on NEM-363 adapter.

Attach the Kadee bolt on NEM-363 adapter to the floor of the car and then slide the Kadee NEM-363 coupler in to NEM-363 Receiver on car from the bottom. Adjusting the coupler height to match the Kadee #206 coupler height gauge.

"A" Dimension

- #54 extra long 12.30mm (.484 Inches)
- #53 long 10.67mm (.420 Inches)
- #52 medium 8.63mm (.340 Inches)
- #51 short 7.11mm (.280 Inches)

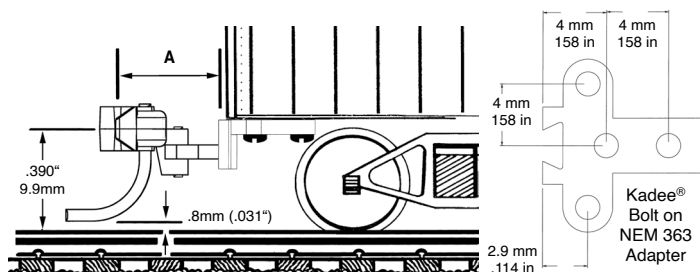

SEE THE NEM-363 COUPLER INSTRUCTIONS

