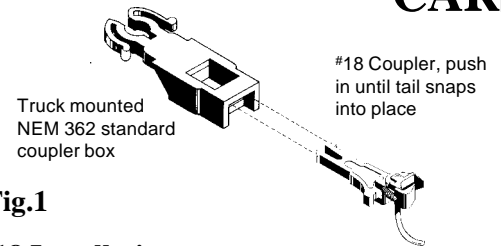


AHM (RIVAROSS)**ALL 4-WHEEL EUROPEAN PASSENGER
CARS****#18 COUPLER MOUNTED IN NEM 362 BOX**

1. Remove coupler assembly from truck by pulling out. Remove swallow tail couplers from NEM 362 truck mounted coupler box by pushing swallow tail catches together and pulling coupler out.
2. Insert #18 Coupler into box per instructions. See Fig.1.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

**Fig.1****#18 Installation**