


## A - LINE (PROTO POWER WEST)

### No.5® COUPLER CONVERSION

1. This conversion consists of inserting the Kadee® Centering Spring and Coupler in the correct order into the models cast-on draft gear box and securing the assembly.
2. Follow the instructions included with the No.5® Coupler for assembly and adjustment.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

## ALL ROLLING STOCK

**Centering Spring  
must always be  
on top**

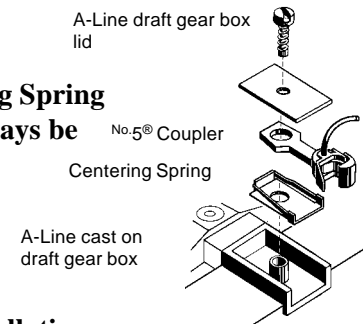

**Fig.1**

**No.5® Installation**