

AMERICAN MODEL BUILDERS, INC.

PASS. CAR SIDES

No.5® BODY MOUNTED COUPLER CONVERSION

1. Assemble the No.5® Coupler per instructions and install by securing with 2-56 screw on centerline and 1/4" from car end.
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

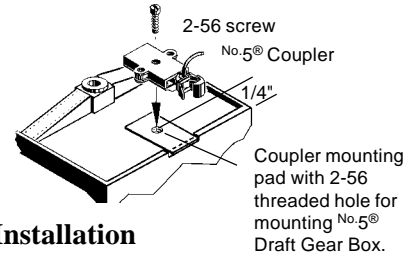


Fig.1

No.5® Installation