

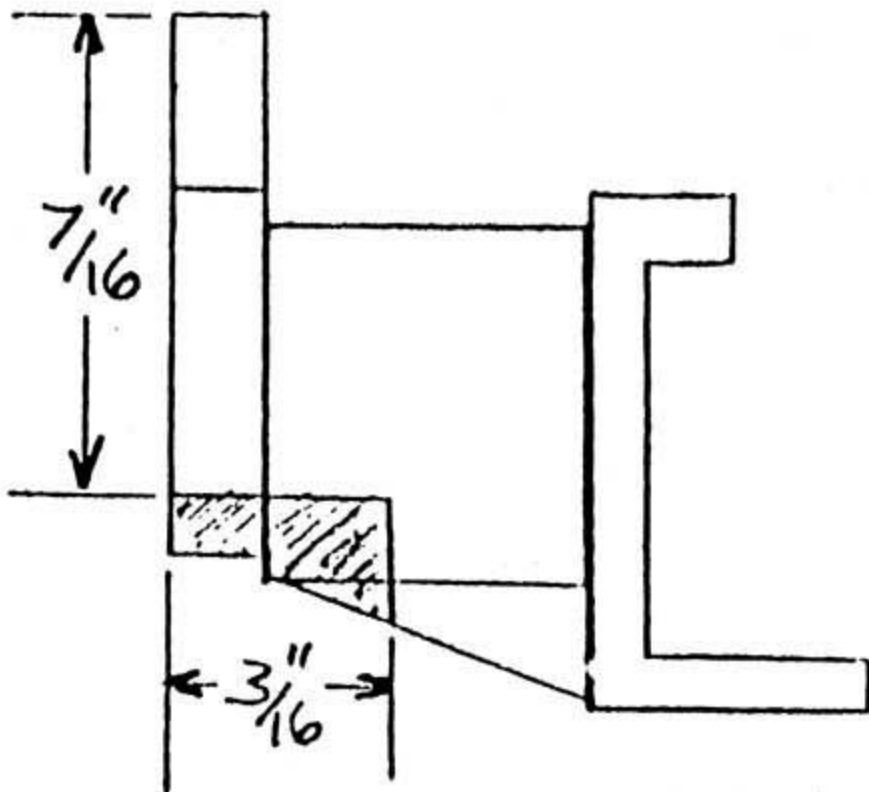
**ARISTO-CRAFT****4-6-2 Pacific****#826 Pilot  
#831 / #1831 Tender****Pilot:**

Install both coupler shims on the top to move the coupler down.

Cut the brass pocket as shown.

Place on the pilot as far down as it will go and on center.

Use 2-56 plastic screws for mounting, tap or use nuts.

**Tender:**

Use #831 / #1831. Use the 2 white shims to tip the coupler up.