


ATHEARN

0-4-2 T LITTLE MONSTER

No.5® COUPLER CONVERSION

1. To install No.5® Coupler remove Athearn screw, draft gear box lid and existing coupler from both ends of loco.
2. For front and rear of loco, install the coupler with Centering Spring on top, over the centerpost in Athearn draft gear box. Replace box lid and secure with screw from bottom, as shown in Fig.1
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

Front Athearn switcher pilot with cast-on coupler draft gear box is shown here, rear pilot coupler mounting is identical

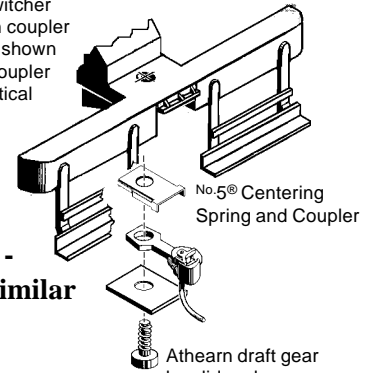

Front View -
Rear view similar

Fig.1

No.5® Installation