

ATHEARN (GENESIS)

EMD F-3, F-7 & F-9 A & B

#36 FRONT OF 'A' UNIT

#38 REAR OF 'A' & AND BOTH ENDS OF 'B' UNIT

1. Remove existing coupler mounting screw, coupler and coupler box on both ends. Save screws.
2. Assemble the #36 or #38 Coupler with Coupler on top and Torsion Spring on bottom.
3. Use the original screw to fasten the coupler assembly to the car floor. If screw is too short then drill and tap existing hole for 2-56 screw.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

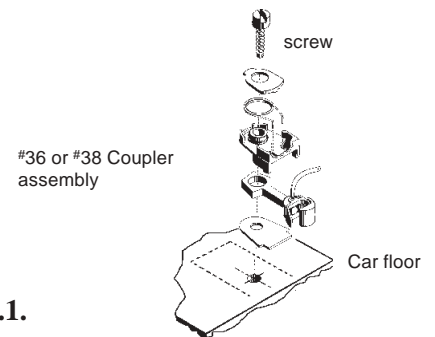


Fig.1.

#36 & #38 Installation