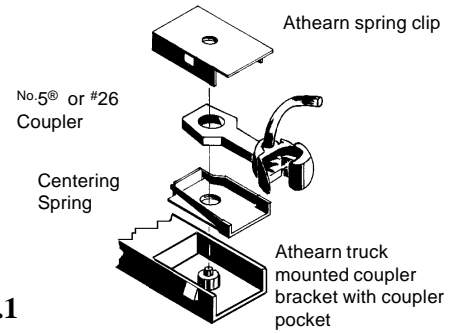


# ATHEARN

# PASSENGER CAR STREAMLINED

## No.5® TRUCK MOUNTED COUPLER CONVERSION (#26 SMALL RADIUS)

1. Remove snap-on coupler lid and existing coupler, discard coupler, save lid.
2. Insert Centering Spring over centerpost in truck mounted coupler pocket, as shown in Fig.1.
3. Place No.5® Coupler (large radius) or #26 (small radius) over centerpost and between sides of centering spring. Secure assembly with Athearn snap-on lid.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.



**Fig.1**

**No.5® Installation**