


ATHEARN PASSENGER CAR OBSERVATION STREAMLINED

#22 TRUCK MOUNTED COUPLER CONVERSION(#29 SMALL RADIUS)

Passenger Car observation Streamlined

- $\textbf{1.} \, \mathsf{Remove} \, \mathsf{snap-on} \, \mathsf{coupler} \, \mathsf{lid} \, \mathsf{and} \, \mathsf{existing} \, \mathsf{coupler}, \, \mathsf{discard} \, \mathsf{coupler}, \, \mathsf{save} \, \mathsf{lid}.$
- 2. Insert Centering Spring over centerpost in truck mounted coupler pocket, as shown in Fig.1.
- **3.** Place #22 Coupler (large radius) or #29 (small radius) over centerpost and between sides of centering spring. Secure assembly with Athearn snap-on lid.
- **4.**Check for correct coupler height, function, and clearance and make any adjustments necessary.

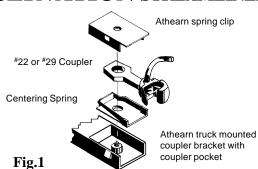

#22 Installation