


## **ATLAS** AEM-7

## NO.5® OR #58 COUPLER CONVERSION

- **1.** Remove the screw and remove coupler pocket from mounting platform. Save screw.
- 2. Remove the existing coupler.
- 3. Assemble the No.5® or #58 Coupler with Centering Spring on top. Place Lid on Draft Gear Box. place coupler pocket back in mounting platform and secure with screw.
- 4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

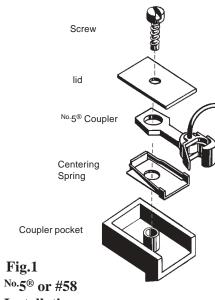

**Installation**