

BOWSER

T-7 TYPE TENDER

No.5® COUPLER CONVERSION

1. Remove existing trucks and couplers. Discard couplers.
2. Assemble No.5® Coupler. Use a plastic compatible cement sparingly along seams only to hold assembly together. Secure to tender with 2-56 x 1/4" screw. There are recesses in the tender frame casting that should match the side mounting lugs on the Kadee® Draft Gear Box.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

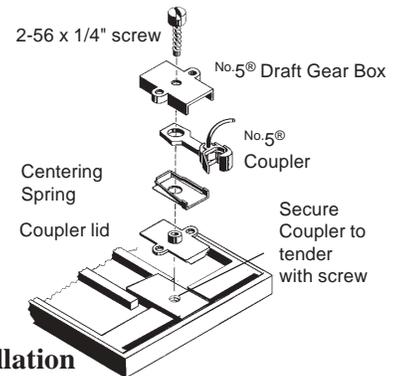


Fig.1

No.5® Installation