

CON-COR (ATHEARN)**#21 COUPLER CONVERSION (PLASTIC BODY)**

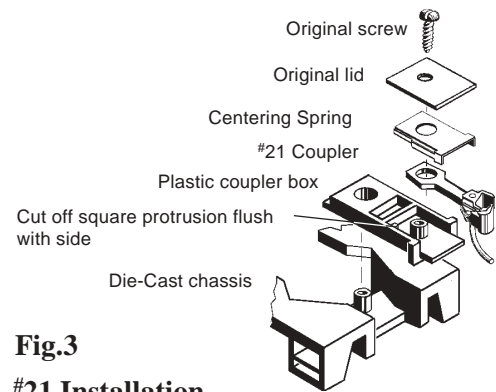
1. Remove body by prying sides apart. Remove the screw and lid from coupler box. Remove and discard couplers. It is not necessary to remove plastic coupler box from chassis. However, if you choose to remove the box, be careful not to lose the centering spring at the back of the box.

2. Trim square protrusion on side at back of box flush with side. Place #21 Coupler in box and Centering Spring on top of coupler. See Fig. 3.

3. Replace lid on box with longer end towards knuckle and secure with original screw.

4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

Note: A #27 Coupler may be used for closer coupling. However, platform at bottom of end door will have to be trimmed to clear coupler.

BUDD RDC**Fig.3****#21 Installation**