


# CON-COR

# FREIGHT CAR KITS (WOOD)

## #4 OR No.5® COUPLER CONVERSION

1. Assemble the coupler per instructions and install by gluing in place or securing with a screw. Be sure the coupler is mounted exactly on centerline.
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

## "A new Concept Kit" series

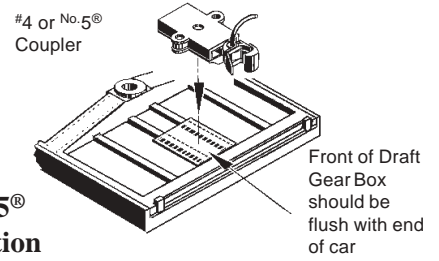

**Fig.1**  
**#4 or No.5®**  
**Installation**