

CON-COR

BOX CAR

No.5® COUPLER CONVERSION

1. See instructions for general coupler installation instructions for this 40' box car.
2. Special for this car before reinstalling trucks: Add two .015" thick spacer washers (Kadee® #208) over bolster truck mounting hub to raise car floor and coupler pocket to proper height.
3. Reattach trucks with screw.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

"Empire builder series"

Coupler pocket spring clip cover

Place two .015" thick spacer washers over bolster truck mounting post to raise car and coupler height

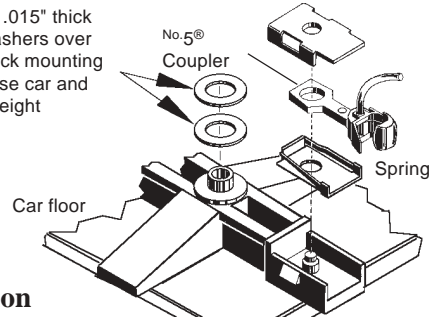


Fig.1
No.5®
Installation