

CUSTOM RAIL

89' TOFC

No.5® COUPLER CONVERSION

1. Remove the existing coupler.
2. Assemble the No.5® Coupler with the Centering Spring on top and Coupler on bottom. Use Custom Rail's own coupler lid.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

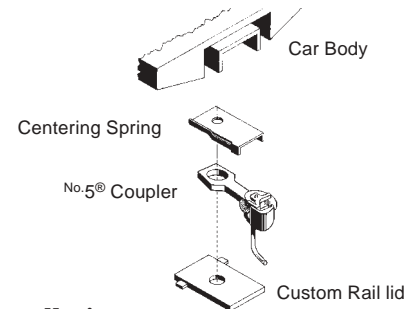


Fig.1

No.5® Installation