

E & B VALLEY

COVERED HOPPER

#22 COUPLER CONVERSION

1. Remove the underframe.
2. Insert the #22 Coupler with Centering Spring on top into the mounted-on coupler box. Glue lid on box by using small amount of plastic compatible cement along seams only.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

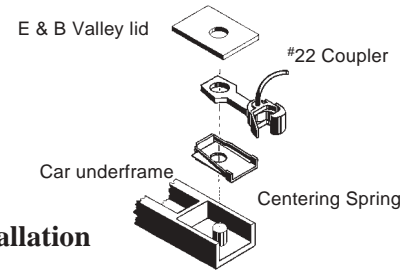


Fig.1

#22 Installation