

IHC MEHANO

THUNDER BOLT SET CARS

#28 TRUCK (TALGO) COUPLER CONVERSION

1. Assemble the #28 Coupler into the truck mounted coupler box according to the 20-Series instructions. Refer to "Conversion Instructions for TYCO and Life Like/ Model Power" plus paragraph 5 in instructions. See Fig.1.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

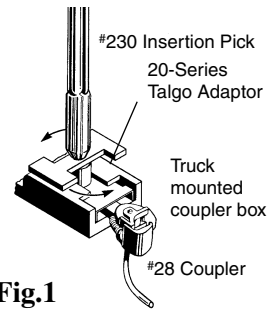


Fig.1
#28 Installation

Cut here for body mount

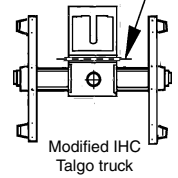


Fig.2