

J-C MODELS

ALL ROLLING STOCK

No.5® COUPLER CONVERSION

1. Assemble the No.5® Coupler per instructions and install by securing with small wood screw on car centerline and 1/4" from car end.
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

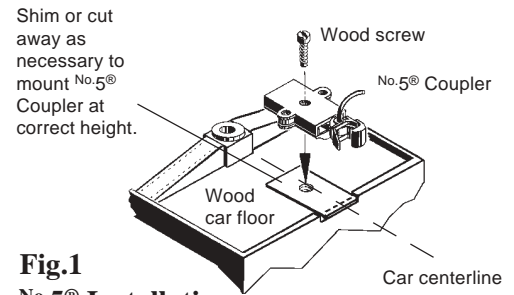


Fig.1
No.5® Installation