


KEYSTONE LOCOMOTIVE WORKS

LOG BUGGY

No.5® COUPLER CONVERSION

1. Assemble the No.5® Coupler per instructions. Glue box and lid together using a small amount of a plastic compatible cement applied along seams only.
2. After glue has dried, trim off side mounting lugs flush with sides.
3. Install coupler assembly in Keystone coupler pocket and secure with a CA glue.
4. Check for correct coupler height, function, and clearance and make any adjustments necessary.

No.5® Coupler assembly. Cut off side mounting lugs flush with sides.

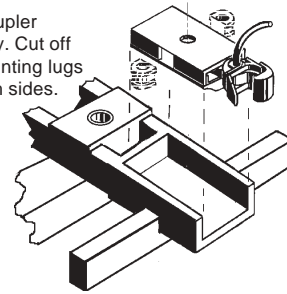

Install coupler assembly in Keystone coupler pocket and secure with a CA glue.

Fig.1
No.5®

Installation