

LIFE-LIKE ALL ROLLING STOCK (TRUCK MOUNTED)

#27 OR #28 TRUCK (TALGO) MOUNTED COUPLER CONVERSION

NOTE: Manufacturing variations on truck assemblies may require a #28 Coupler instead of a #27 Coupler. Simply substitute #28 for #27 mentioned below. **1.** Assemble the #27 or #28 Coupler into the truck mounted coupler box according to the instructions. See Fig.1.

2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

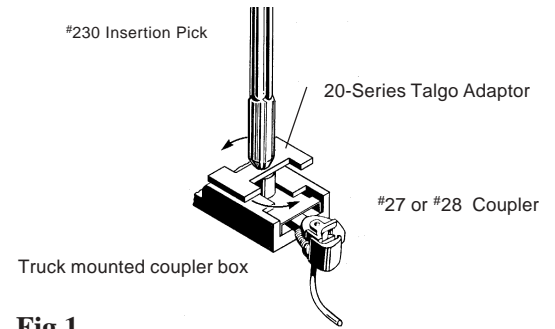


Fig.1

#27 or #28 Truck Installation