

MODEL POWER

HARRIMAN PASSENGER/ OBSERVATION CAR

#28 TRUCK (TALGO) MOUNTED COUPLER CONVERSION

1. Remove the truck from the underbody.
2. Remove the coupler furnished with the car.
3. Assemble the coupler as shown in Fig.1.
4. For the truck mounted Talgo type coupler box follow 20-Series Coupler instructions and see Fig. 1 for #28 Coupler. Some passenger car trucks on some Model Power cars are not suitable for this type of truck mounting of 20-Series Couplers.
5. Check for correct coupler height, function, and clearance and make any adjustments necessary.

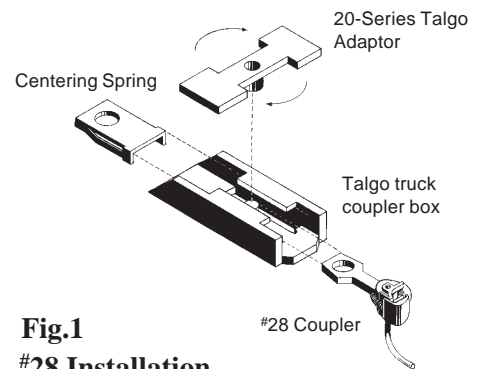


Fig.1
#28 Installation