

NEW ENGLAND RAIL SERVICE

NO.5® COUPLER CONVERSION

ALL ROLLING STOCK

1. Assemble the No.5® Coupler per instructions and install by securing with 2-56 screw on centerline and 1/4" from car end.
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

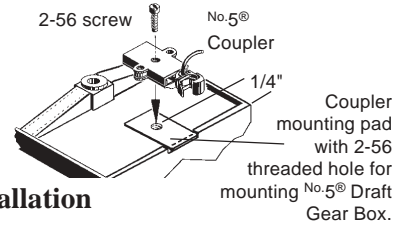


Fig.1
No.5® Installation