
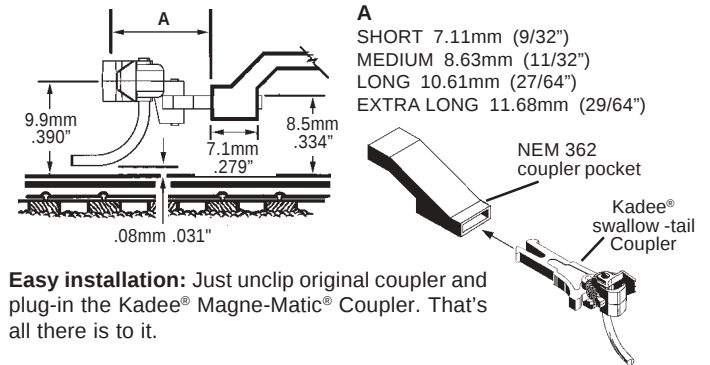



NEM COUPLERS

NEM COUPLER CONVERSION


1. Remove existing couplers and discard.
2. Insert appropriate length NEM coupler (see the Kadee® conversion list).
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

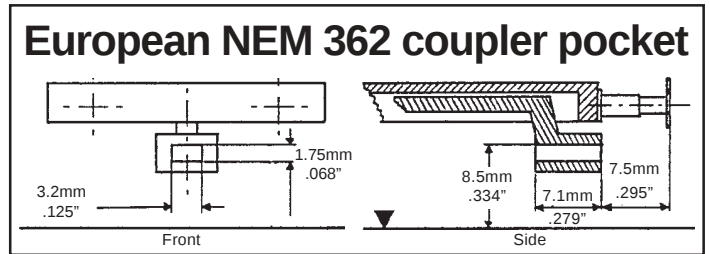


17 SHORT
7.11MM (9/32")

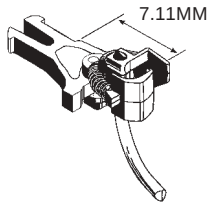

MEDIUM
8.63MM (11/32") **18**

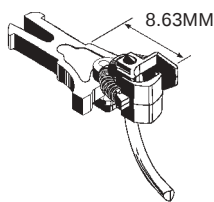

19 LONG
10.61MM (27/64")

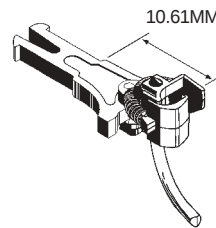

EXTRA LONG **20**
11.68MM (29/64")

