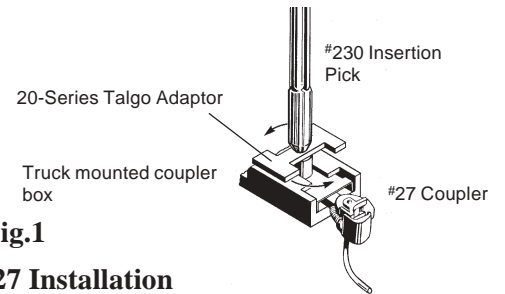


PMI LIMA**0-4-0 SWITCHER****#27 TRUCK MOUNTED COUPLER CONVERSION**

1. Remove trucks from car underfloor.
2. Follow 20-Series instructions for Talgo truck mounting of couplers.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

**Fig.1****#27 Installation**

032304