

PMI LIMA

ALCO C420

#27 TRUCK MOUNTED COUPLER CONVERSION

1. Remove trucks and couplers.
2. Follow 20-Series instructions paying careful attention to paragraphs 1 through 4 for Talgo truck mounting of couplers.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

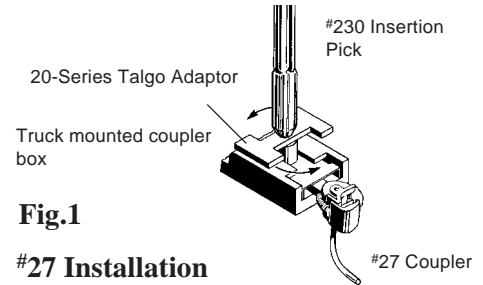


Fig.1

#27 Installation