

PROTO POWER WEST

THRALL CONTAINER CAR

No.5® COUPLER CONVERSION

1. Remove the truck and coupler box. Save box and screw and discard coupler.
2. Assemble the No.5® Coupler with the Centering Spring on top. Place coupler in Proto Power West gear box and secure assembly to car.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

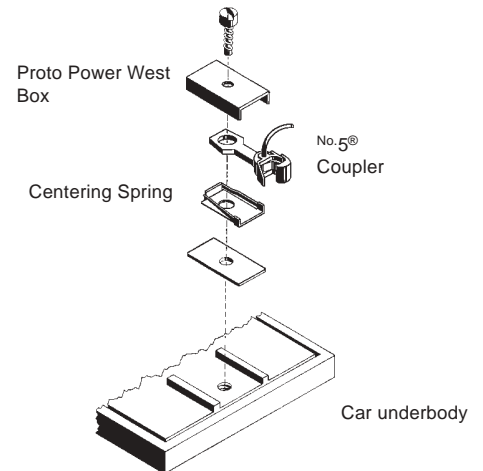


Fig.1

No.5® Installation