


QUALITY CRAFT MODELS

ALL ROLLING STOCK

No.5® BODY MOUNTED COUPLER

1. Assemble the coupler per instructions and install by gluing in place or securing with a screw. Be sure the coupler is mounted exactly on centerline.
2. Check for correct coupler height, function, and clearance and make any adjustments necessary.

No.5® Coupler

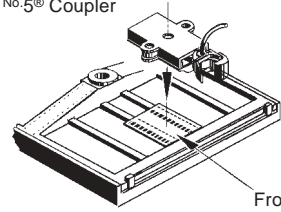

Front of Draft Gear
Box should be flush
with end of car

Fig.1

No.5® Installation