

RIVAROSSO POST 1993

6 WHEEL PASSENGER TRUCKS

#505 COUPLER CONVERSION

1. Remove trucks from car and coupler from truck by pulling out.
2. Install #505 Coupler Conversion Bolster Kit (includes No.5® Couplers) per instructions. See Fig.1.
3. Reinstall trucks and check for correct coupler height, function and clearance.

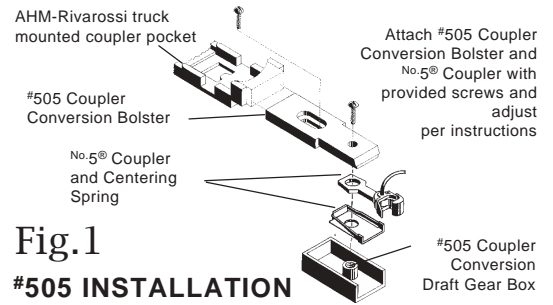


Fig.1
#505 INSTALLATION