


# VAN HOBBIES MODELS

## CANADIAN MODELS BY PFM

### No.5® COUPLER CONVERSION

1. Remove existing couplers.
2. Use screws (metric) that come with model to secure No.5® Coupler assembly. Usually there are two screws for each coupler assembly, one for each side mounting lug. If screws are missing or you wish to convert to a single 2-56 screw, drill and tap a 2-56 hole 1/4" from edge of model on centerline. Use a 2-56 screw of appropriate length to secure No.5® Coupler. See Fig.1.
3. Check for correct coupler height, function, and clearance and make any adjustments necessary.

## ALL ROLLING STOCK

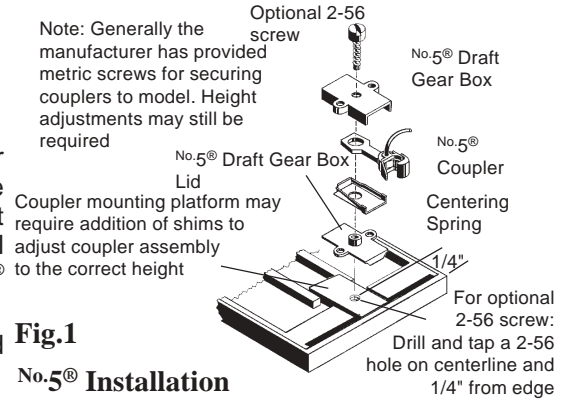

**Fig.1**

### No.5® Installation